

Xoro Pad 9W4 Pro quick gui-



Initiation

Welcome to your new Xoro Pad 9W4 Pro Notebook. This Quick Start Guide gives you an overview about the product, the operation, support and compliance information. Please also read the instructions in the official Windows 10 Operating guide from Microsoft.

To use you must, if not already present, create a user account with Microsoft in order to use the device without restrictions. If you have forgotten your password, you can have it reset under www.live.com.

Switching on and off

To turn on the device press and hold the Power button until the startup screen appears. The system startup may take several minutes, please wait for the end of the operation. If necessary, follow the installation wizard for easy setup of the device. To turn off the device, hold the power button until the Shutoff Screen appears. Drag the image that appears down to shut down the notebook. Alternatively, you can restart the device in the Windows Start menu, shut down or put in the standby mode.

Standby and Hibernate

The device goes depending on the configuration into hibernation when it is not used for some time in order to save battery power. Use the power button to turn it on again. Briefly press the power button to switch to standby mode. Briefly press the power button to turn on the unit again.

Device overview



1. volume +
2. volume -
3. Power Button ON/OFF
4. 3.5mm Headphone jack
5. USB 2.0 port

6. MicroSD cardreader
7. Webcam
8. rear camera
9. speaker

Battery & Charging

The device can also get the required current for charging the battery from a USB 2.0 port of a connected computer. Alternatively use the supplied power adapter to charge your Xoro Tablets. The unit is ready to operate even during charging. For a long battery life however we recommend not to use the device while charging.

Notes:

- We recommend to charge your tablet to use only the supplied charger. Charge the battery fully before initial use.
- For best performance lithium-ion batteries need to be used frequently. For low usage charge the battery at least once after a month.
- If the device's battery is completely drained, turn the unit 5-10 minutes to connect to a power source. It can then be immediately put back into operation. In individual cases, the device can not be switched on even after prolonged charging. Please list, in this case by a reset.
- Close unneeded apps to extend the battery life of the device.

USB ports & memory cards

The device has a microUSB 2.0 port (5). This connector USB devices such as mass storage devices (USB sticks, hard drives) or USB input devices (mouse, keyboard etc.) to be connected. Also, the device has a MicroSD memory card slot (6). The device supports memory cards with capacity of up to 32GB FAT & NTFS.

To insert the microSD card, make sure that the memory card is properly around, as shown on the device, is introduced.



Press the Micro SD card into the card reader until it clicks. To remove the Micro SD card, press it again until something.

Notes:

- It supports only the file systems FAT / FAT32 / NTFS. If a medium is formatted with a different file system, then this may not be recognized by the device.
- The micro USB port on this device are not suitable for charging other devices with an integrated battery (eg mobile phones, tablet computer, MP3 player, etc.). Notice. Regarding the information on the nameplate. Maximum power output of the USB ports
- Unfortunately, there are a variety of different SD cards and USB 2.0 storage devices on the market, so a basic compatibility of all storage media can not be guaranteed.
- A direct USB connection to another PC is not possible.

Virtual keyboard

Tap to use the onscreen keyboard on a screen area, you can enter in the text. The on-screen keyboard appears. If you are on the desktop, tap the desktop taskbar, click the icon for the screen keyboard to open the onscreen keyboard. Tap to close the onscreen keyboard outside the text box, or tap the icon for the on-screen keyboard and then click the icon to close the keyboard.

Headphone

The device is equipped on the top of a headphone connector (4). For the use of a commercially available headphones with 3.5 mm jack plug is required. The built-in speaker on the back is automatically turned off when using headphones.

This is new in Windows 10





Start Menu

Select on the taskbar "Start" . The apps that you use most often, and links to other tools and features on your PC (eg. B. File Explorer and settings) can be found on the left in the list *all apps*.

Windows Store

The store is for music, videos, games and apps. Try an app before buying, or select a free app. Your Windows 10 apps work on all your Windows 10 devices.

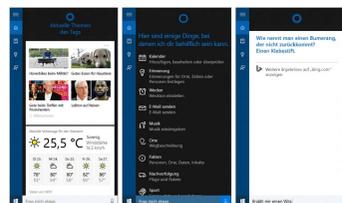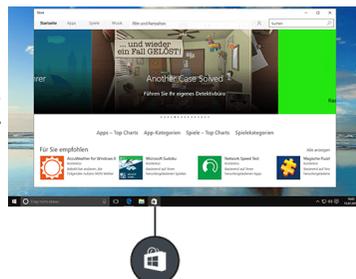


Cortana

Cortana, your personal assistant, you can use directly to your desktop. Ask them to plan a meeting or send an e-mail to a friend. You even find your files, and can tell you jokes. Select the search field, and enter, which is meant to help Cortana, or simply use the microphone to speak to her.

Microsoft Edge

Microsoft Edge is the first browser that allows you to add notes directly to websites, writing, painting and can highlight items. Use the Reading List to save your favorite articles, and read it later in the read view. Moreover, Cortana is integrated into Microsoft Edge, so you can get things done quicker and easier.

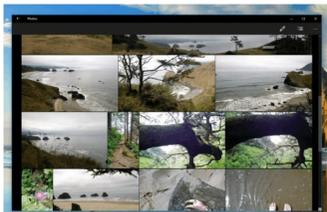

All your photos in one central location

No endless Search more. The Photos app gathers all your photos and videos in one central location. From your mobile phone, PC and OneDrive. They then organize your memories in albums that you can view and share with others.

Windows Hello

If Windows Hello is available on your device, change the way how you sign up - instead of a password is your face or fingerprint used. Switch for setting the function *settings / accounts / login options*.



Settings & Design




Settings

Jump To access the settings to *Start / Settings*. Browse the categories there, or use the search to find a setting, z. B. the advanced options in the Control Panel. Most apps have their own settings. Search through the app the  Icon

Alternatively, you can change the general properties (z. B. airplane mode and WiFi) directly via the Info Center in the taskbar.

Personal Designs

Go to the start menu, select *Settings / Personalization / designs* and *design settings*. Then select a standard style, or use relate more designs online to download new designs with cute animals, cheering scenes and other fun designs.

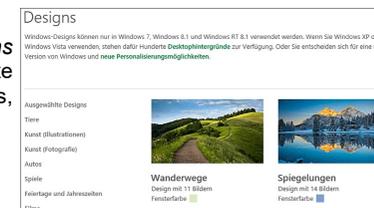

Personal Desktop

Go to the start menu page and then select *Settings / Personalization* to select an image for embellishing your desktop background and changing the accent color for the home, the Taskbar and other elements. Under *background* choose an image and a solid color, or create a slide show with pictures. Under *color* choose a accent color from your background filter, or make your own choice of colors.

Your Microsoft Account

If you are registered in setting up Windows with your Microsoft account - perfect! If not, that's okay - you can log in at any time. Similarly, if you do not know exactly what is a Microsoft account, just read on.

Have you ever Outlook.com, Hotmail, Office 365, OneDrive, Skype, Xbox or Windows used? In the e-mail address and the password that you use for these services, it is your Microsoft account. Otherwise, you can easily create a free under Outlook.com e-mail account and set it as your new Microsoft account.

Your Microsoft account gives you access to apps and games from the Windows Store and the ability to use your settings and other data on multiple Windows 10 devices.



A Windows 10 user guide can be downloaded via the QR Code. For questions our support team is available:

phone: +49 4161 800 24 24 (Mo-Fr: 09-17:30 Uhr)
eMail: support@ersservice.de

